

Village Hall BOILER OPERATING INSTRUCTIONS

In order to save on energy wastage in the village hall please operate as follows:-

Hot water for sinks

Switch on switch marked hot water 10 minutes before hot water is needed, the boiler will fire up and continue to run until the small internal hot water reserve tank has reached operating temperature, constant hot water will now be available. Remember to switch off before vacating the hall on completion of village hall usage.

Central heating.

This operates just the same as the old system except the room thermostat is now on the wall entering the kitchen doorway. Turn the thermostat to the required setting and remember to turn it back to 10 before vacating the village hall. **NOTE.** If both hot water and central heating are required and selected the central heating will not start until the hot water has reached its operating temperature which will mean a central heating start up delay of 10 minutes.

If any problems are found with operating the system as suggested please contact Martin Cree, Rampton Village Hall Warden Mobile number 07471877504

